HANDBOK
USER´S MANUAL
BEDIENUNGSANLEITUNG
MANUEL D'UTILISATION

AGNSPRIDARE
CHAFFSPREADER
SPREUVERTEILER
ÉPARPILLEURS DE PAILLE

CASE IH

1640, 1660, 1680
2166, 2188

REKORDVERKEN Sweden AB
Öttum
SE-535 92 KVÄNUM
Tel. +46(0)511-37 01 00 Fax. +46(0)511-37 00 07

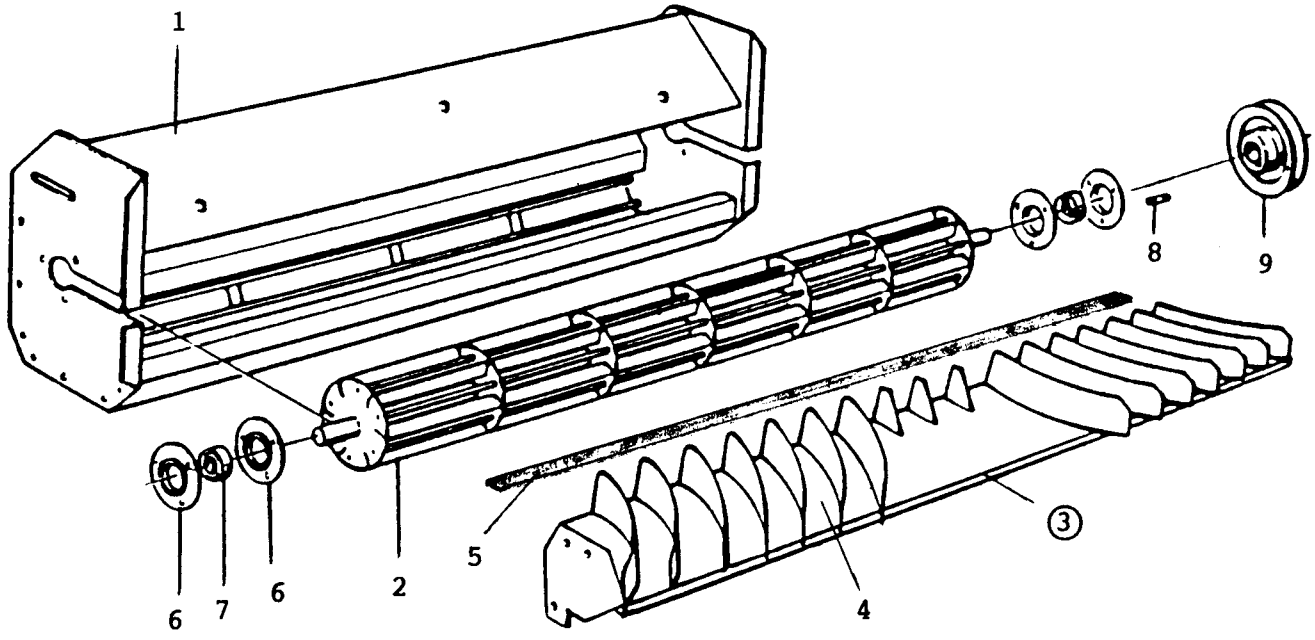

	JI CASE 1640, 1660, 2166 JI CASE 1680, 2188	11800 11801	REKORD SWEDEN Feb. 1995

Pos. nr. Répere	Beställn.nr. Part no. Bestellungsnr. No. piéce	Antal, Qty Anzahl, Qty 1640-60 2166	 1680 2188	Beställ. nr. JI CASE Part no. Bestellungsnr. No. piéce
1	22045	1	-	123279 A1
1	22046	-	1	123280 A1
2	22049	1	-	123281 A1
2	22050	-	1	123282 A1
3	33250	1	-	117991 A1
3	33251	-	1	177984 A1
4	-11930	1	-	123283 A2
4	-11931	-	1	123284 A2
5	-45542	1	-	177982 A1
5	-45543	-	1	177980 A1
6	00561	4	4	123285 A1
7	00562	2	2	123286 A1
8	00719	1	1	123287 A1
9	32761	1	1	123288 A1

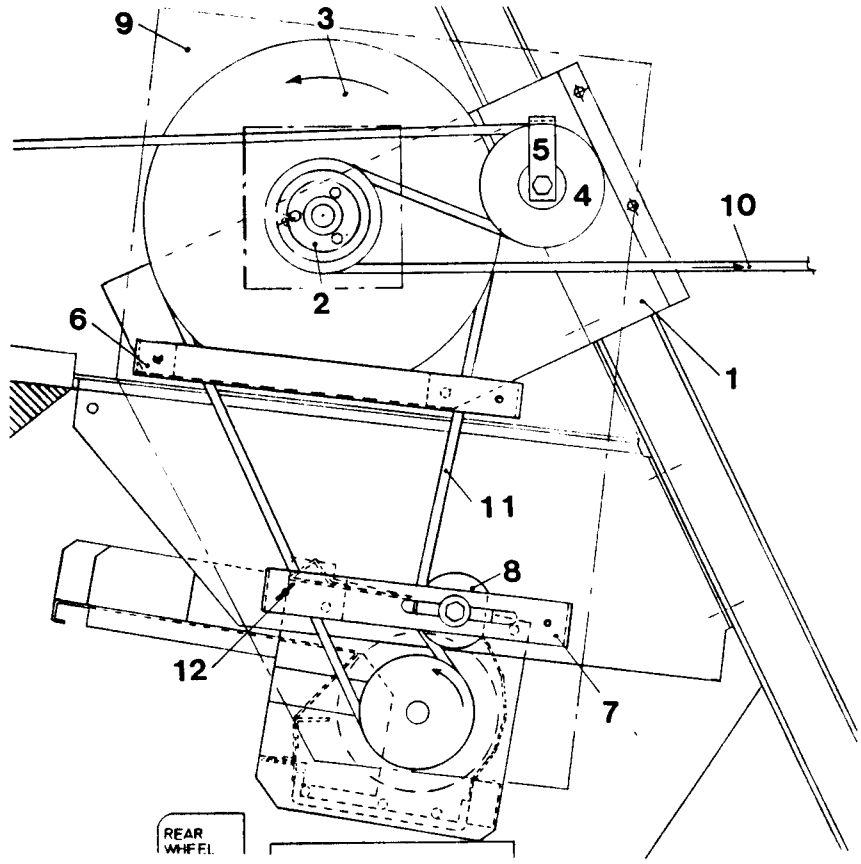

JI CASE 1640, 1660, 2166 **11800**
JI CASE 1680, 2188 **11801**

REKORD SWEDEN

Feb. 1995

Pos. nr. Répere	Beställn.nr. Part no. Bestellungsnr. No. piéce	Antal, Qty Anzahl, Qty				Beställ. nr. JI CASE Part no. Bestellungsnr. No. piéce
		1640,1660	1680	2166	2188	
1	22059	1	1	1	1	123290 A1
2	32997	1	1	1	1	123335 A1
3	22104	1	1	1	1	123292 A1
4	44550	1	1	1	1	123295 A1
5	44090	1	1	1	1	123296 A1
6	32888	1	1	-	-	123298 A1
6	45913	-	-	1	1	
7	32909	1	1	1	1	123301 A1
8	32768	1	1	1	1	123302 A1
9	11921	1	-	-	-	123303 A1
9	11922	-	1	-	-	123304 A1
9	45911	-	-	1	-	
9	45917	-	-	-	1	
10	01634	1	1	1	1	123305 A1
11	01633	1	-	1	-	123306 A1
11	01635	-	1	-	1	123307 A1
12	09548	4	4	4	4	123308 A1

CE

REKORD SWEDEN

REKORDVERKEN Sweden AB, Öttum S-535 92 KVÄNUM
Tel. +46 (0)511-701 00 Fax. +46 (0)511-700 07

Machine type

Serial no.

CE

Year of manufacturing

SAFETY SIGNS

Ejected material. Stay clear while chaffspreader is running

This sign is placed at chaffspreader´s both sides

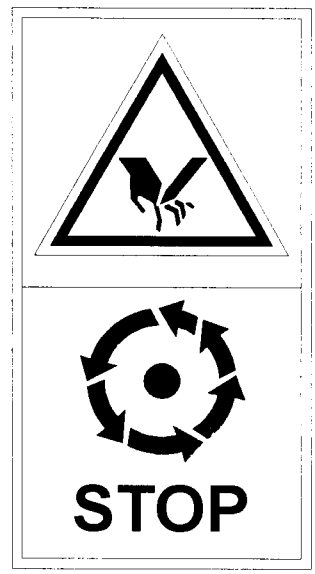

Wait until all machine components have stopped competely before touching them

This sign is placed at chaffspreader´s both sides

Safety Notes:
Park combine
Apply parking brake
Turne engine off
Take key out off switch

When finished:
Check to remove all tools and parts from inside combine

DANGER!!
Never stand near rear of combine when combine is operating!

Preparation Note:

- *Remove orginal belt for straw spreader.*
- *Remove flexible chaff plate over the rear wheel axle.*
- *Drill 4 new holes diam. 11 in orginal side plates. See figure 1.*
- *Change the bolts in the hinged door assambly, under the sieves, to cup head bolts (delivered in chaff spreader kit) 3 on each side. Fitting the bolts on the inside, nuts outside.*
- *Cut off the rubber guard. See figure 2.*
- *Cut off a piece off both tie rod brackets on the axle. (Only on JI CASE 1680.) See figure 3.*

NOT TO BE USED IN MAIZE, SUNFLOWER OR SIMULAR CROPS.

- DISMOUNT THE SPREADERPLATE

- DISENGAGE THE FREEWHEEL

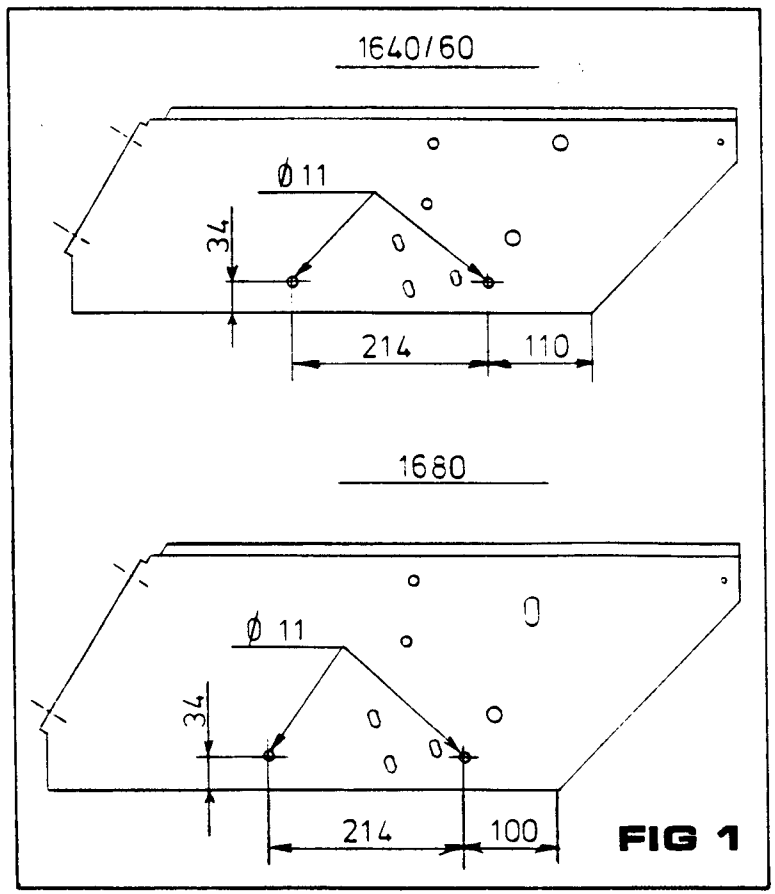

FIG 1

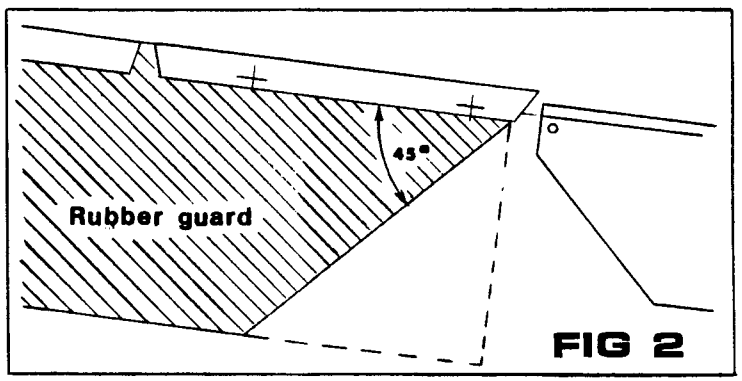

FIG 2

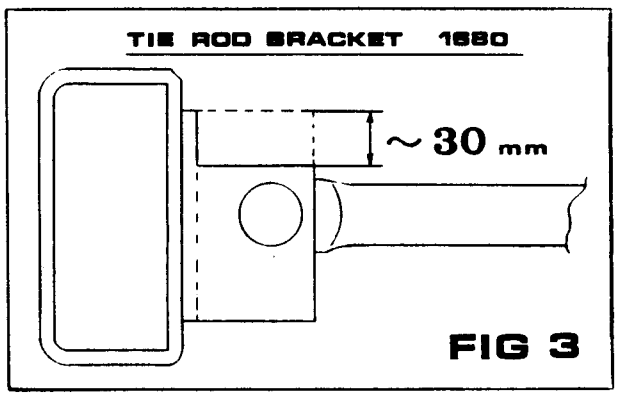

FIG 3

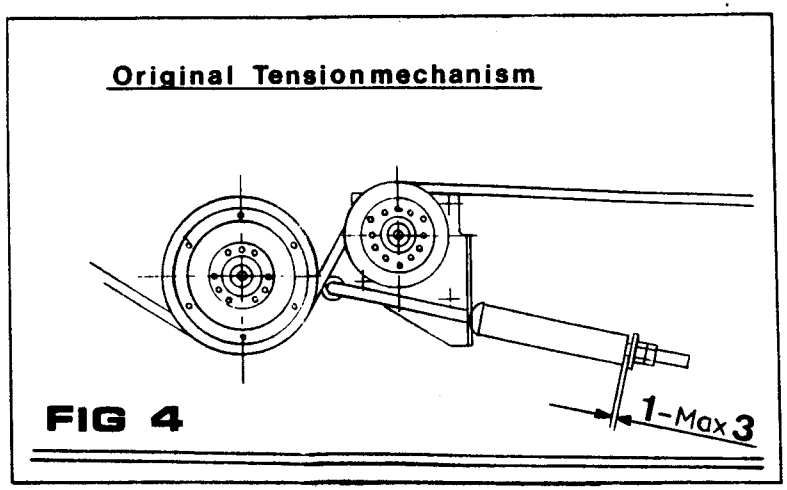

FIG 4

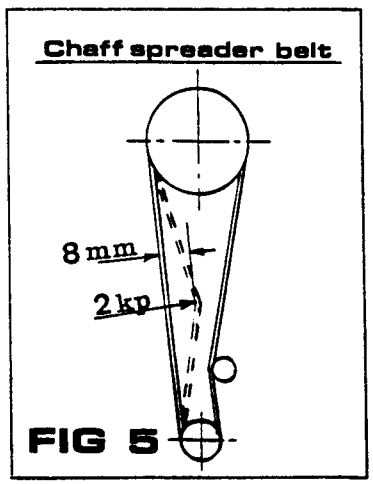

FIG 5

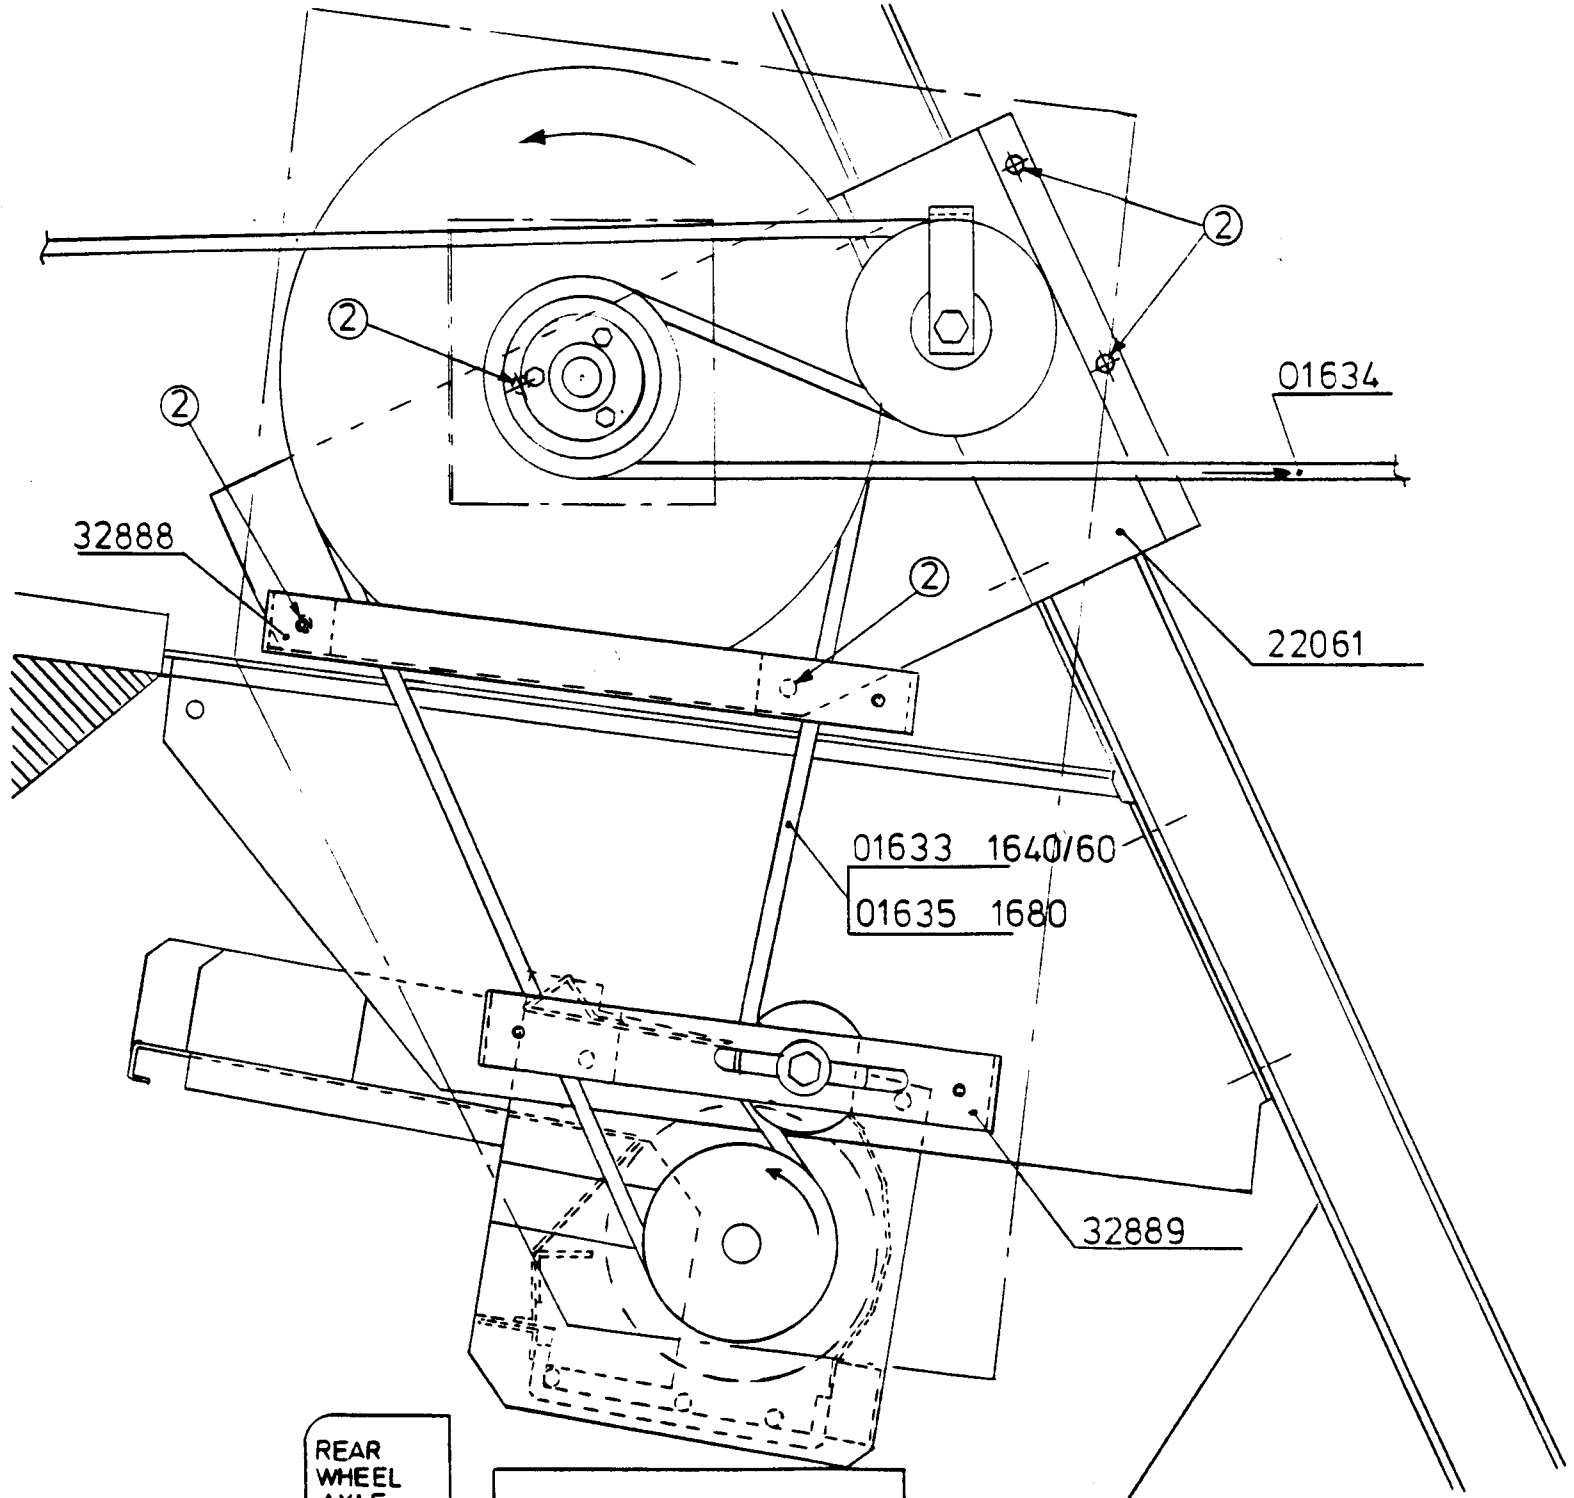

Working Notes:

1. Mount the transmission braket 22061 towards to the U-girder on right side. Use 2 existing bolts.
2. Drill 5 holes diam. 11 for attachment of the trans mission bracket. To drill the hole behinde the pulleys, remove pulleys.
3. Mount upper clamp 32888 in the bottem holes on the transmission bracket. Use M 10*25 screw.
4. Place the fan unit between the side plates and mount lower clamp 32889 on outside the right hand side plate.
   Use M 10*30 screw on right side and M 10*25 on left side.
5. Mount upper and lower belts and tension the belts. See figure 4 and 5.
6. Mount guard.
7. Mount warning decals.

Checklist
Chaff Spreader JI CASE

Before operating the chaff spreader, check carefully the following:

- Belt lines straight
- Belt tension after 10 minute test run
- No untoward sounds from the fan unit when increasing / decreasing speed
- Fan unit and pulleys are in balance
- There is no interference between the steering tyres and the chaff spreader at maximum axle / tyre articulation
- Warning decals are prominently mounted
- All guards are correctly mounted
- Operating instructions and spare part list are placed in the combine cab

IMPORTANT

Keep well clear of the chaffspreader at all times when the fan unit is rotating.
An unbalanced fan can cause damage to other parts.
In extremely heavy moisture conditions chaff may stick. Under such condition´s, do not use the chaffspreader. Remove spreaderplate and disengage the fan.

DAILY CHECKS

Check that fan rotor is free from straw.
Check that protective guard mesh and deflector plates are clean.
Check for correct belt tension. Initial check to be made after 2 hours of use.

GRAIN LOSS CHECK

Disengage the fan before checking grain loss from the seives. The clutch is located on jackshaft behind the guard. The chaff fan can be disengaged only for a short time with the spreaderplate mounted.

BELTS

The spreader disc belt tension according to the combine manual.
The chaffspreader belt tension

MAIZE (OTHER CROPS)

Not to be used when combining maize, sunflower or similar crops.
"Turn off" chaffspreader only by dismounting spreaderplate and disengaging the fan.